 
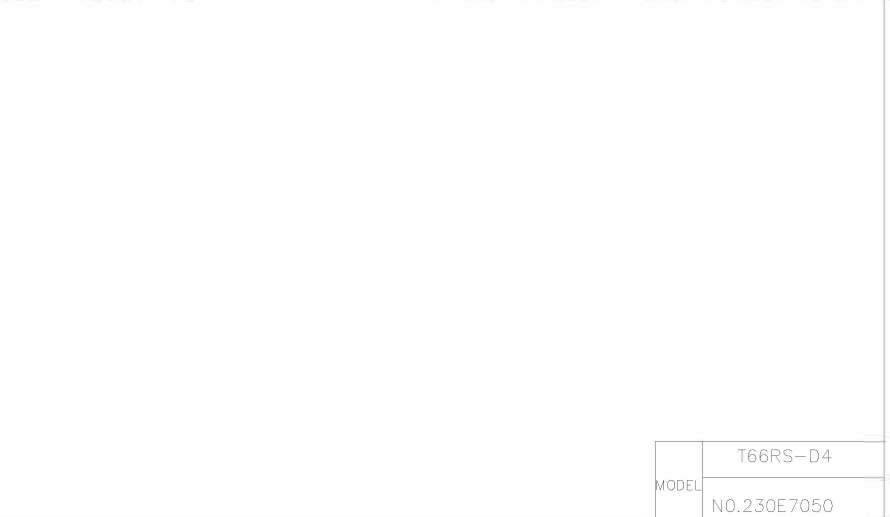 
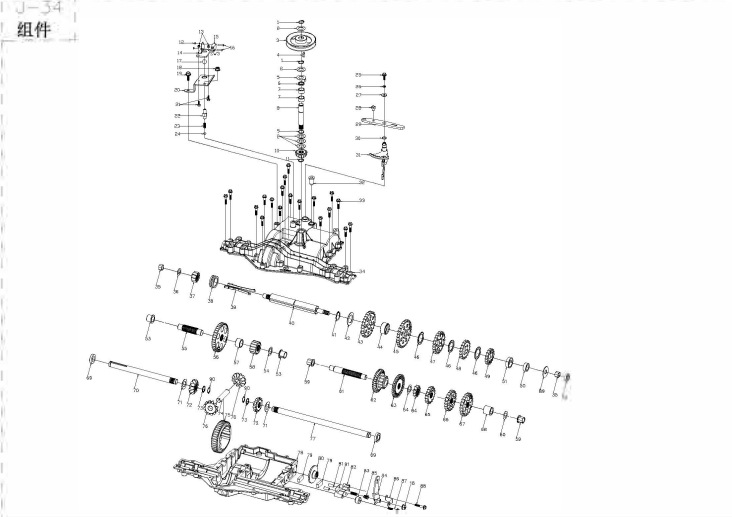 
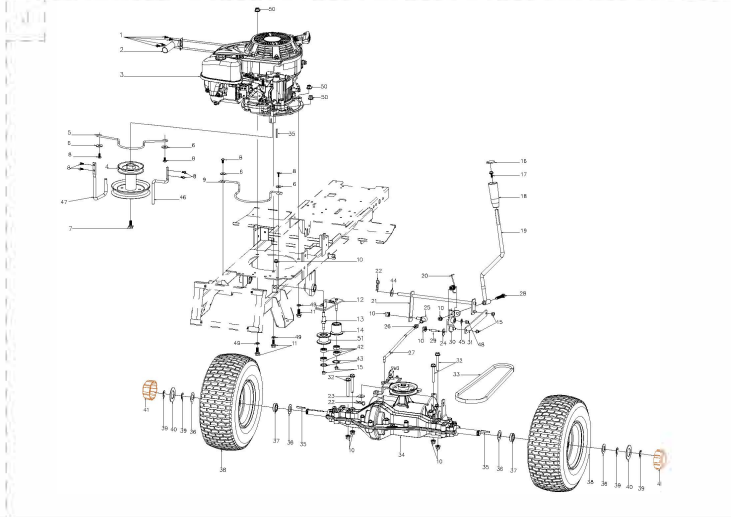 
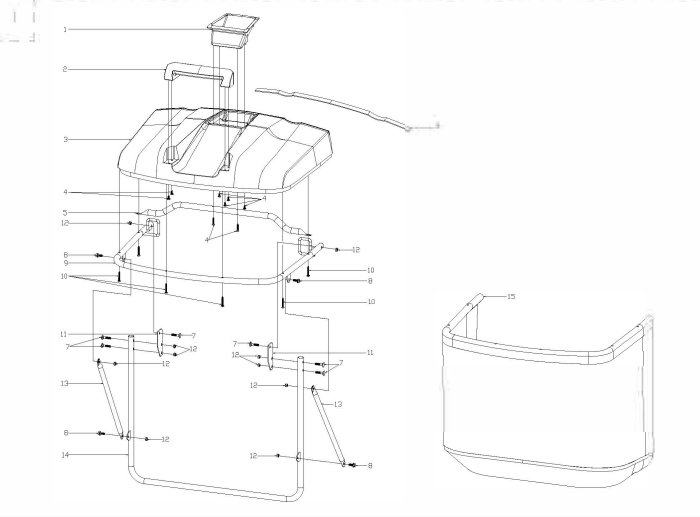 
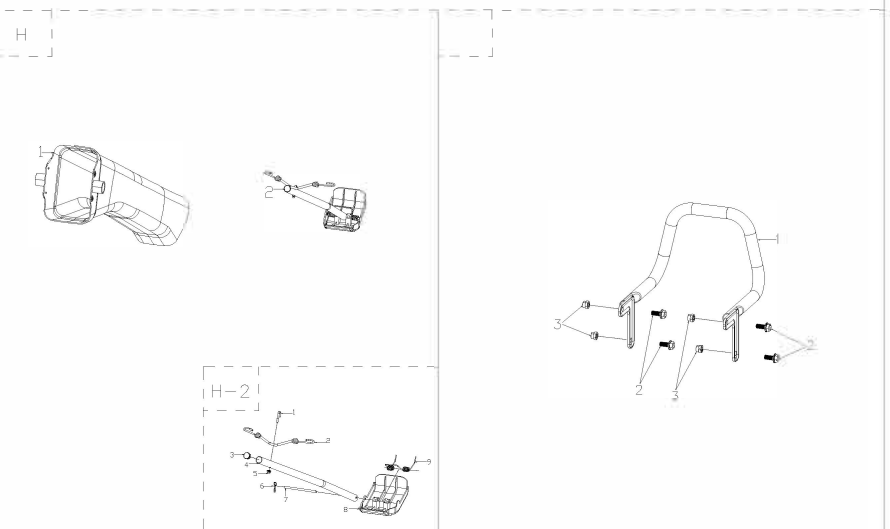 
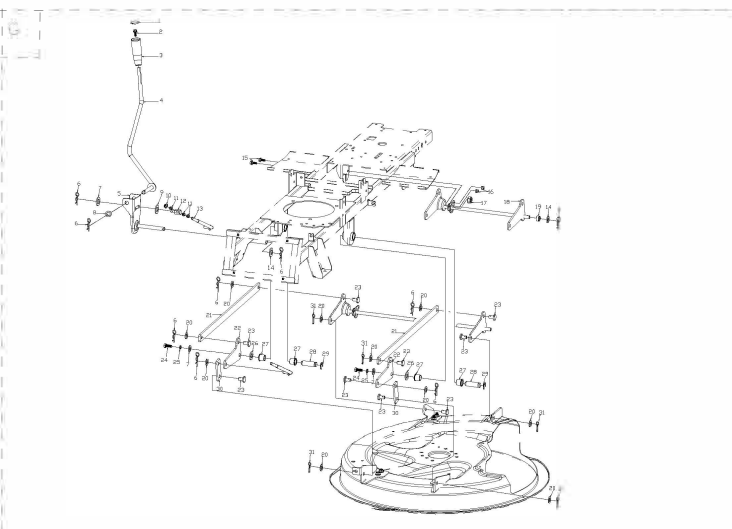 
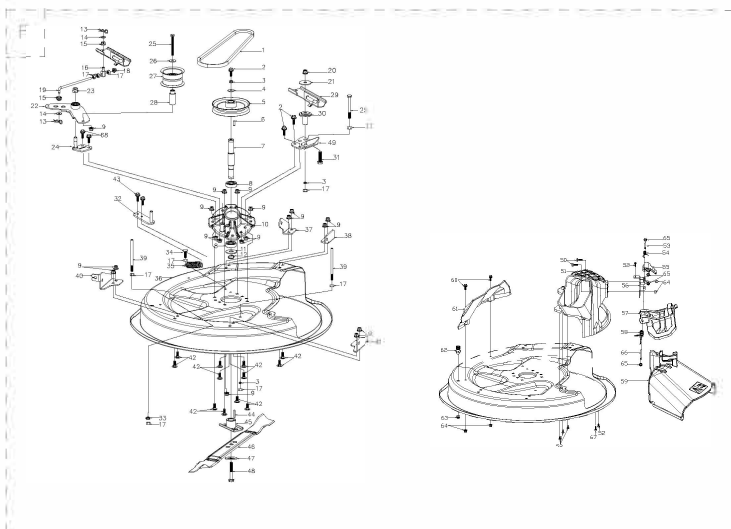 
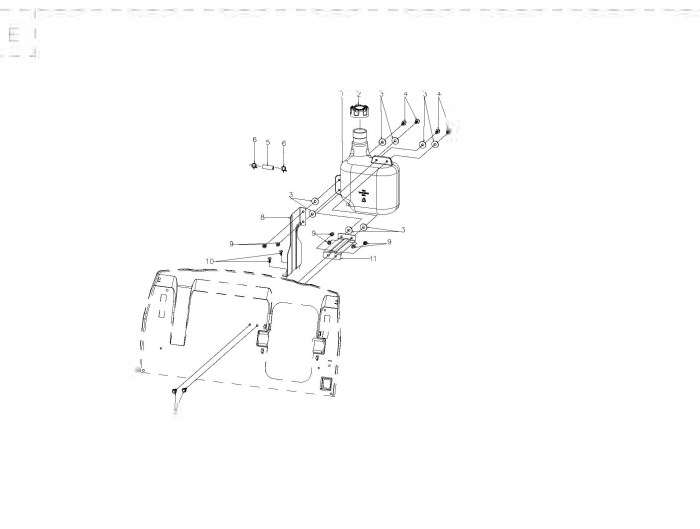 
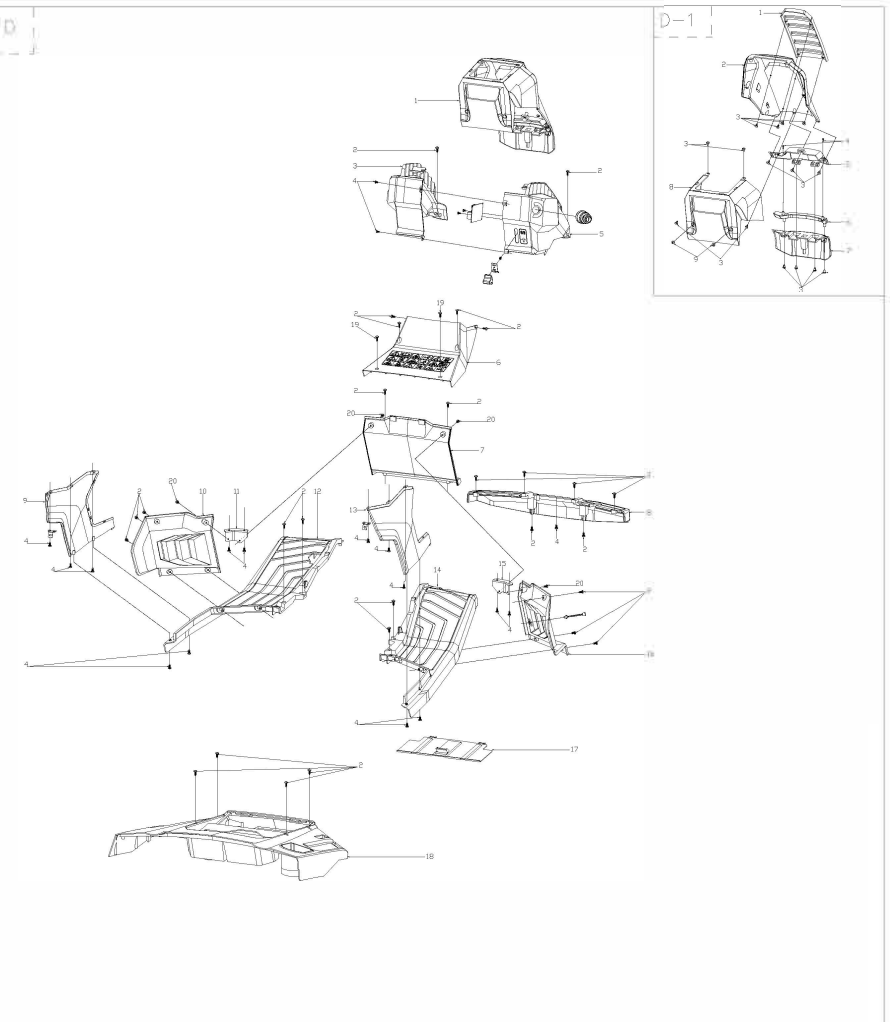 
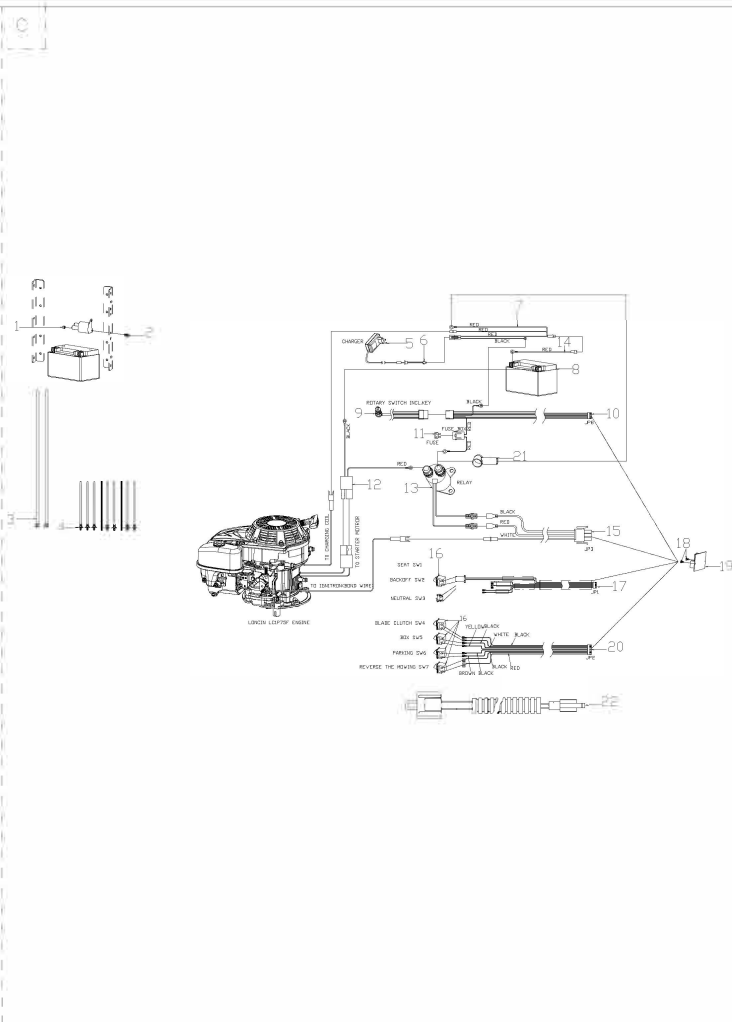 
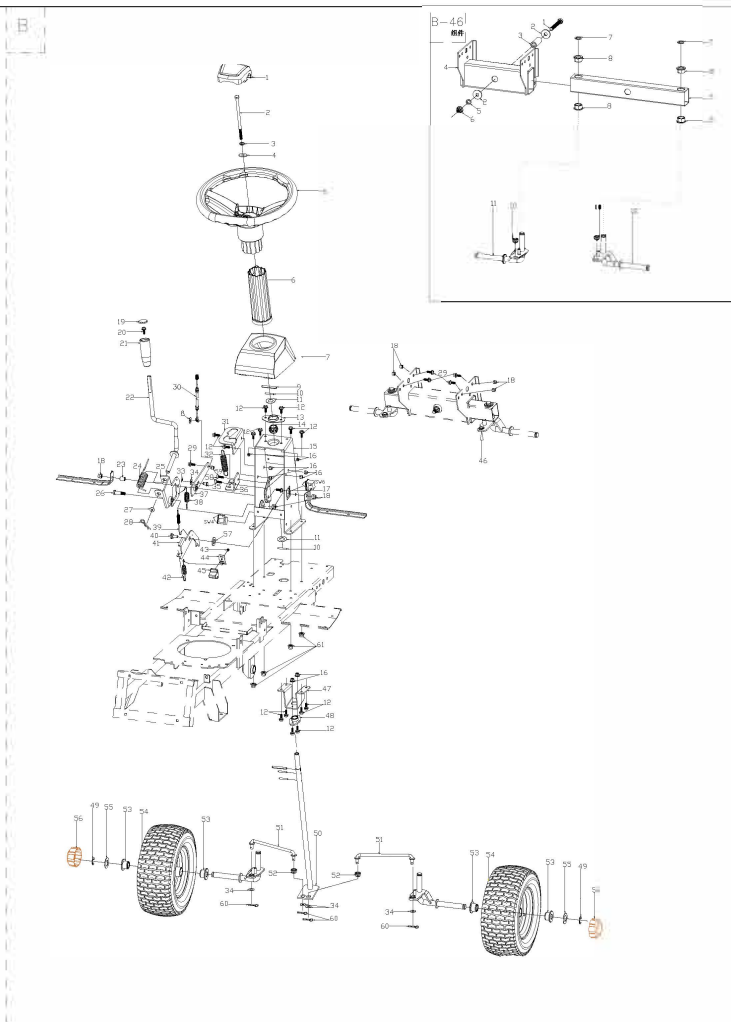 


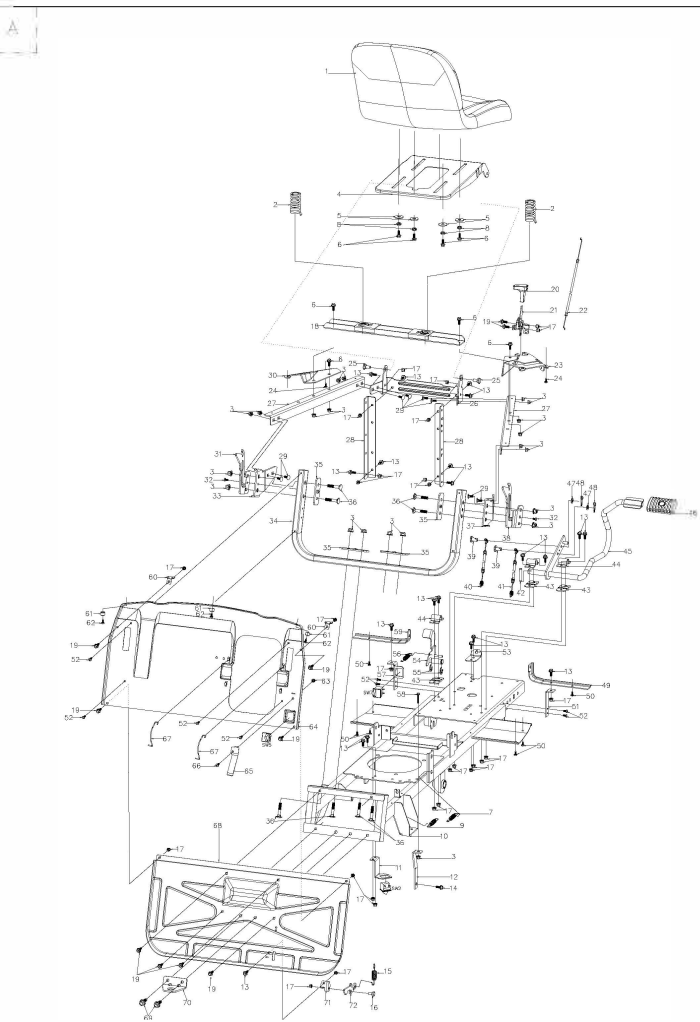

BOM清单

LP	Kod Cedrus	Nazwa	Ilość
A-01	482200	Seat	1
A-02	482201	Seat vibration damping springs	2
A-03	482202	Nut	23
A-04	482203	Seat fixing Plate	1
A-05	482204	Flat Washer	4
A-06	482205	Bolt	8
A-07	482206	Tensioning spring	1
A-08	482207	Spring washer	4
A-09	482208	Brake Spring	1
A-10	482209	Frame assembly	1
A-11	482210	Backward switch fixing plate	1
A-12	482211	Drive axle side fixing plate	1
A-13	482212	Bolt	21
A-14	482213	Bolt	1
A-15	482214	Spring	1
A-16	482215	Bolt	1
A-17	482216	Nut	28
A-18	482217	Seat vibration dampening spring retainer	1
A-19	482218	Bolt	10
A-20	482219	Variable speed handle	1
A-21	482220	speed governor	1
A-22	482221	Throttle cable	1
A-23	482222	Gear shift lever panel.	1
A-24	482223	screws	2
A-25	482224	Bolt	2
A-26	482225	Support plate	1
A-27	482226	Seat linkage rod	2
A-28	482227	Support Rods	2
A-29	482228	Bolt	8
A-30	482229	Hegiht adjustment panel	1
A-31	482230	left bracket for grass bag	1
A-32	482231	Gasket of Cylinder Head	2
A-33	482232	left connecting plate for seat linkage rod	1
A-34	482233	seat frame support bracket	1
A-35	482234	Frame connection reinforcement plate	4
A-36	482235	Bolt	8
A-37	482236	Right connecting plate for seat linkage rod	1
A-38	482237	Right bracket for grass bag	1
A-39	482238	Pin	2
A-40	482239	Brake Cable	1
A-41	482240	Self-propelled clutch cable	1
A-42	482241	Pin	1
A-43	482242	brake pedal pad	3
A-44	482243	brake pedal retainer plate	3
A-45	482244	brake pedal Rods	1
A-46	482245	Brake pedal	1
A-47	482246	Split Pin	2

BOM清单

A-48	482247	Flat Washer	2
A-49	482248	Footrest right fixing plate	1
A-50	482249	screws	6
A-51	482250	Footrest support plate	1
A-52	482251	Gasket of Cylinder Head	8
A-53	482252	Blade clutch cable fixing plate	1
A-54	482253	Reverse mowing pedal assembly	1
A-55	482254	Circlip	2
A-56	482255	Reverse gear cutting return spring	1
A-57	482256	reverse mowing switch fixing plate	1
A-58	482257	Bolt	1
A-59	482258	Footrest left fixing plate	1
A-60	482259	Upper Cover fixing plate	2
A-61	482260	Gear shift plate fixing bushing II	3
A-62	482261	screws	3
A-63	482262	Nut	1
A-64	482263	Upper panel	1
A-65	482264	Grass bag safty switch plate	1
A-66	482265	Screw	1
A-67	482266	Wire clip	2
A-68	482267	Lower panel	1
A-69	482268	screws	2
A-70	482269	Fixed plate	1
A-71	482270	Fix plate	1
A-72	482271	Grass Box Limit Hooks	1
B-01	482272	steering wheel cover	1
B-02	482273	Bolt	1
B-03	482274	Spring washer	1
B-04	482275	Flat Washer	1
B-05	482276	Steering Wheel	1
B-06	482277	steering connection sleeve	1
B-07	482278	steering wheel bottom cover	1
B-08	482279	Flat Washer	1
B-09	482280	Pin	1
B-10	482281	Pin	2
B-11	482282	Flat Washer	2
B-12	482283	Bolt	14
B-13	482284	Steering shaft plate	1
B-14	482285	Steering shaft bushings	1
B-15	482286	Steering shaft support seat	1
B-16	482287	Nut	8
B-17	482288	Bolt	1
B-18	482289	Nut	7
B-19	482290	Handle Cover	1
B-20	482291	Bolt	1
B-21	482292	Handle	1
B-22	482293	Blade clutch operating lever	1
B-23	482294	Bushing 8×12×15.5	1
B-24	482295	Blade clutch operating lever spring	1

BOM清单

B-25	482296	Blade clutch puller assembly	1
B-26	482297	Bolt	1
B-27	482298	Flat Washer	1
B-28	482299	Split Pin	1
B-29	482300	Bolt	5
B-30	482301	Blade clutch cable	1
B-31	482302	Blade clutch gear plate	1
B-32	482303	Cutter belt brake tension spring	1
B-33	482304	Circlip	1
B-34	482305	Flat Washer	5
B-35	482306	Pin	1
B-36	482307	Brake cable fixing plate	1
B-37	482308	Blade clutch cable mounting plate assembly	1
B-38	482309	Blade clutch return tension spring	1
B-39	482310	Parking return tension spring	1
B-40	482311	Bolt	1
B-41	482312	Parking plate assembly	1
B-42	482313	Parking spring	1
B-43	482314	screws	1
B-44	482315	Parking plate	1
B-45	482316	Parking handle	1
B-46	482317	Front frame assembly	1
B-46-01	482318	Bolt	1
B-46-02	482319	Gasket	2
B-46-03	482320	Front wheel suspension beam axle bushing	1
B-46-04	482321	Front crossmember assembly	1
B-46-05	482322	Spring washer	1
B-46-06	482323	Nut	1
B-46-07	482324	Circlip	2
B-46-08	482325	Front wheel axle bushing	4
B-46-09	482326	Front wheel suspension beam	1
B-46-10	482327	Steering linkage busing	2
B-46-11	482328	Left front wheel axle assembly	1
B-46-12	482329	Right front wheel axle assembly	1
B-47	482330	Steering shaft mounting plate	1
B-48	482331	Steering shaft fixed bushing	1
B-49	482332	Circlip	2
B-50	482333	Steering shaft assembly	1
B-51	482334	Steering linkage	2
B-52	482335	Steering linkage busing	2
B-53	482336	Front wheel axle bushing	4
B-54	482337	13inch Wheel assembly	2
B-55	482338	Gasket	2
B-56	482339	wheel cover	2
B-57	482340	Flat Washer	1
B-58	482341	Bolt	2
B-59	482342	Nut	1
B-60	482343	Split Pin	4
B-61	482344	Nut	4

BOM清单

C-01	482345	Nut	1
C-02	482346	Bolt	1
C-03	482347	Nylon Ties	2
C-04	482348	Pin	9
C-05	482349	Charger	1
C-06	482350	Charging cable	1
C-07	482351	Charger wire in battery	1
C-08	482352	Battery	1
C-09	482353	Key assembly	1
C-10	482354	Wire	1
C-11	482355	Battery	1
C-12	482356	Motor Waire	1
C-13	482357	Battery	1
C-14	482358	Battery Wire	1
C-15	482359	Wire	1
C-16	482360	Switch	5
C-17	482361	Wire	1
C-18	482362	screws	2
C-19	482363	PCB	1
C-20	482364	Wire	1
C-21	482365	sleeve	1
C-22	482366	Wire	1
D-01-1	482367	Front trim plate	1
D-01-2	482368	Front part	1
D-01-3	482369	screws	15
D-01-4	482370	screws	2
D-01-5	482371	Front face lamp shade	1
D-01-6	482372	Lamp strip fixing plate	1
D-01-7	482373	Lampshade base	1
D-01-8	482374	Front face base	1
D-01-9	482375	screws	2
D-02	482376	screws	28
D-03	482377	Left Cover	1
D-04	482378	screws	17
D-05	482379	Right Cover	1
D-06	482380	Lower Cover	1
D-07	482381	seat base front cover	1
D-08	482382	Front cover	1
D-09	482383	left side cover	1
D-10	482384	seat base left cover	1
D-11	482385	Left connect plate	1
D-12	482386	Left footrest plate	1
D-13	482387	left right cover	1
D-14	482388	Right footrest plate	1
D-15	482389	Right connect plate	1
D-16	482390	seat base right cover	1
D-17	482391	Cover	1
D-18	482392	Upper Cover	1
D-19	482393	screws	2

BOM清单

D-20	482394	screws	4
E-01	482395	Oil Tank	1
E-02	482396	Tank Cup	1
E-03	482397	Gasket	8
E-04	482398	Bolt	4
E-05	482399	fuel pipe	1
E-06	482400	coax	2
E-07	482401	Bolt	2
E-08	482402	Oil tank lower brackets	1
E-09	482403	Nut	6
E-10	482404	Gasket of Cylinder Head	2
E-11	482405	Oil tank upper brackets	1
F	482406	side discharge assembly	1
F-01	482407	Wrapping tape	1
F-02	482408	Bolt	3
F-03	482409	Spring washer	3
F-04	482410	Spring Washer	1
F-05	482411	Blade pulley assembly	1
F-06	482412	Flat Key	1
F-07	482413	Blade pulley shaft	1
F-08	482414	Ball Bearing	2
F-09	482415	Nut	18
F-10	482416	Blade pulley hub	1
F-11	482417	Dust cover	1
F-12	482418	Lock Ring	1
F-13	482419	Split Pin	2
F-14	482420	Flat Washer	2
F-15	482421	Steering linkage busing	2
F-16	482422	Hex shaft directional joint	1
F-17	482423	Nut	10
F-18	482424	Nut	1
F-19	482425	Tensioning brake interlock rod	1
F-20	482426	Nut	1
F-21	482427	Flat Washer	1
F-22	482428	Blade tensioning roller lever	1
F-23	482429	Nut	1
F-24	482430	Blade tensioner fixing plate	1
F-25	482431	Bolt	2
F-26	482432	Flat Washer	1
F-27	482433	Blade tensioner assembly	1
F-28	482434	Bushing	1
F-29	482435	Brake plate	1
F-30	482436	Support sleeve	1
F-31	482437	Bolt	1
F-32	482438	Cutterhead belt limit fixing plate assembly	1
F-33	482439	Spring washer	1
F-34	482440	Bolt	1
F-35	482441	Cutter belt brake tension spring	1
F-36	482442	Deck	1

BOM清单

F-37	482443	Front - Deck Left fixing Plate	1
F-38	482444	Front - Deck Right fixing Plate	1
F-39	482445	Belt limiting screw	2
F-40	482446	Rear - Deck Left fixing Plate	1
F-41	482447	Rear - Deck Left fixing Plate	1
F-42	482448	Bolt	12
F-43	482449	Bolt	2
F-44	482450	Flat Key	1
F-45	482451	Blade adoptor assembly	1
F-46	482452	Blade	1
F-47	482453	Spring Washer	1
F-48	482454	Blade Bolt	1
F-49	482455	Fixed plate	1
F-50	482456	Bolt	2
F-51	482457	Side discharge grass cylinder base	1
F-52	482458	screws	5
F-53	482459	Safety plate shaft	1
F-54	482460	Safety plate spring	1
F-55	482461	Safety plate	1
F-56	482462	Side-discharge brackets	1
F-57	482463	Side-discharge Cover	1
F-58	482464	Spring	1
F-59	482465	Side-discharge guide plate	1
F-60	482466	Bolt	2
F-61	482467	blade belt cover	1
F-62	482468	Washing Linker	1
F-63	482469	Nut	1
F-64	482470	Nut	4
F-65	482471	Lock Ring	4
F-66	482472	Shaft	1
F-67	482473	screws	1
F-68	482474	Bolt	2
G-01	482475	Handle Cover	1
G-02	482476	Bolt	1
G-03	482477	Handle	1
G-04	482478	Blade height adjustment rod	1
G-05	482479	Blade height adjustment assembly	1
G-06	482480	Split Pin	9
G-07	482481	Flat Washer	3
G-08	482482	Flat Washer	1
G-09	482483	Flat Washer	1
G-10	482484	Nut	1
G-11	482485	Nut	3
G-12	482486	Hex shaft directional joint	1
G-13	482487	Blade height adjustment rear rod	1
G-14	482488	Flat Washer	2
G-15	482489	Bolt	2
G-16	482490	Nut	2
G-17	482491	Bush	1

BOM清单

G-18	482492	Deck height adjust brackets assembly	1
G-19	482493	Bushing	1
G-20	482494	Flat Washer	10
G-21	482495	Blade height adjustment rod	2
G-22	482496	Blade height adjustment rear plate	2
G-23	482497	Pin	9
G-24	482498	Bolt	2
G-25	482499	Spring washer	2
G-26	482500	Flat Washer	2
G-27	482501	Nylon bushings	4
G-28	482502	Blade height control rotating axle	2
G-29	482503	Circlip	2
G-30	482504	blade height adjustment rear connecting plate	2
G-31	482505	Split Pin	5
H-01	482506	Grass Discharge Cylinder	1
H-02	482507	Grass plug	1
H-02-01	482508	Lever	1
H-02-02	482509	Cow Rope	1
H-02-03	482510	Handle Plug	1
H-02-04	482511	Mulching plug handle bar	1
H-02-05	482512	Nut	1
H-02-06	482513	Split Pin	1
H-02-07	482514	Shaft	1
H-02-08	482515	Mulching plug	1
H-02-09	482516	Mulching plug spring	1
I-01	482517	Grass bag front handle	1
I-02	482518	Grass bag rear handle	1
I-03	482519	Grass bag upper cover	1
I-04	482520	screws	8
I-05	482521	Grass catcher handle strengthening rod	1
I-06	482522	Seals	1
I-07	482523	Bolt	6
I-08	482524	Bolt	4
I-09	482525	Upper support pipe assembly for grass bag	1
I-10	482526	screws	6
I-11	482527	Grass bag pipe connection plate	2
I-12	482528	Nut	10
I-13	482529	Grass bag reinforced rod	2
I-14	482530	Lower support pipe assembly for grass bag	1
I-15	482531	Fabric bag	1
J-01	482532	screws	4
J-02	482533	Exhaust outlet nozzle assembly	1
J-03	482534	Engine	1
J-04	482535	Engine pulley assembly	1
J-05	482536	Engine pulley bracket	1
J-06	482537	Flat Washer	4
J-07	482538	Blade Bolt	1
J-08	482539	Gasket of Cylinder Head	8
J-09	482540	Driveshaft pulley bracket	1

BOM清单

J-10	482541	Nut	8
J-11	482542	Bolt	3
J-12	482543	Tensioning wheel swing arm assembly	1
J-13	482544	Tensioner studs	1
J-14	482545	Tensioner	1
J-15	482546	Nut	4
J-16	482547	Handle Cover	1
J-17	482548	Bolt	1
J-18	482549	Handle	1
J-19	482550	Gear lever	1
J-20	482551	Gear lever spring	1
J-21	482552	Gear shift lever assembly	1
J-22	482553	Split Pin	2
J-23	482554	Flat Washer	1
J-24	482555	Flat Washer	1
J-25	482556	ball joint assembly	1
J-26	482557	Nut	1
J-27	482558	Driveshaft rod	1
J-28	482559	Bolt	1
J-29	482560	Pin	1
J-30	482561	Side fixing plate for gear shift	1
J-31	482562	Gear lever rod	1
J-32	482563	Bolt	4
J-33	482564	Belt	1
J-34	482565	Drive axle assembly (four-speed)	1
J-34-1	482566	Lock Ring	2
J-34-2	482567	Gasket	5
J-34-3	482568	Gearbox pulley assembly	1
J-34-4	482569	Flat Key	1
J-34-5	482570	oil seal retainer	1
J-34-6	482571	Oil Seal	1
J-34-7	482572	Ball Bearing	2
J-34-8	482573	Shaft	1
J-34-9	482574	"o" Ring $\phi 20 \times \phi 2.3$	1
J-34-10	482575	Bevel	1
J-34-11	482576	Lock Ring	1
J-34-12	482577	Nut	2
J-34-13	482578	Nut	2
J-34-14	482579	Fixed plate	1
J-34-15	482580	Switch	1
J-34-16	482581	Screw	2
J-34-17	482582	Ball Bearing	1
J-34-18	482583	Nut	2
J-34-19	482584	Bolt	1
J-34-20	482585	Fixed plate	1
J-34-21	482586	Bolt	2
J-34-22	482587	Bolt	1
J-34-23	482588	Spring	1
J-34-24	482589	Ball Bearing	1

BOM清单

J-34-25	482590	Bolt	1
J-34-26	482591	Spring washer	1
J-34-27	482592	Flat Washer	1
J-34-28	482593	Pin	1
J-34-29	482594	Gear lever	1
J-34-30	482595	"o" Ring $\phi 20 \times \phi 2.3$	1
J-34-31	482596	Fork Assembly	1
J-34-32	482597	Plug	1
J-34-33	482598	screw	19
J-34-34	482599	Upper cover	1
J-34-35	482600	Shaft	2
J-34-36	482601	Washer	1
J-34-37	482602	Gear	1
J-34-38	482603	bushings	1
J-34-39	482604	gear shift paddles	2
J-34-40	482605	Shaft	1
J-34-41	482606	Lock Ring	1
J-34-42	482607	Washer	1
J-34-43	482608	Reverse driven gear	1
J-34-44	482609	Neutral Gear Sleeve	1
J-34-45	482610	Driven gear for speed1	1
J-34-46	482611	Washer	3
J-34-47	482612	Driven gear for speed2	1
J-34-48	482613	Driven gear for speed3	1
J-34-49	482614	Driven gear for speed4	1
J-34-50	482615	bush	1
J-34-51	482616	Sleeve	1
J-34-52	482617	Oil Seal	1
J-34-53	482618	Bushing	2
J-34-54	482619	Washer	3
J-34-55	482620	Shaft	1
J-34-56	482621	Gear	1
J-34-57	482622	Sleeve	1
J-34-58	482623	Gear	1
J-34-59	482624	Bushing	2
J-34-60	482625	Washer	2
J-34-61	482626	Shaft	1
J-34-62	482627	Reverse Gear Bevel	1
J-34-63	482628	Bevel	1
J-34-64	482629	Bevel for speed1	1
J-34-65	482630	Bevel for speed2	1
J-34-66	482631	Bevel for speed3	1
J-34-67	482632	Bevel for speed4	1
J-34-68	482633	bush	1
J-34-69	482634	Oil Seal	2
J-34-70	482635	Shaft	1
J-34-71	482636	Gasket	2
J-34-72	482637	gear	2
J-34-73	482638	Lock Ring	2

BOM清单

J-34-74	482639	Pin	1
J-34-75	482640	Bevel disk	1
J-34-76	482641	gear	2
J-34-77	482642	Shaft	1
J-34-78	482643	Lower cover	1
J-34-79	482644	Brake plate	2
J-34-80	482645	Breke disk	1
J-34-81	482646	Pin	2
J-34-82	482647	Fixed plate	1
J-34-83	482648	Pin	1
J-34-84	482649	Brake rocker arm	1
J-34-85	482650	Spring	1
J-34-86	482651	Plate	1
J-34-87	482652	Bolt	1
J-34-88	482653	Bolt	1
J-34-89	482654	Washer	1
J-34-90	482655	Lock Ring	2
J-34-91	482656	Push the plate	1
J-35	482658	Flat Key	3
J-36	482659	Flat Washer	4
J-37	482660	Bushing	2
J-38	482661	15inch Wheel assembly	2
J-39	482662	Circlip	4
J-40	482663	Flat Washer	2
J-41	482664	wheel cover	2
J-42	482665	Ball Bearing	4
J-43	482666	Lock Ring	2
J-44	482667	Flat Washer	1
J-45	482668	Flat Washer	1
J-46	482669	Engine pulley right bracket	1
J-47	482670	Engine pulley left bracket	1
J-48	482671	Nut	1
J-49	482672	Spring washer	3
J-50	482673	Nut	3
J-51	482674	Tensioner	1
L-1	482675	Bumper assembly	1
L-2	482676	Bolt	4
L-3	482677	Nut	4

