



CEDRUSGL05

FIG.1 HEAD SUBASSEMBLY, CYLINDER / PLUG,SPARK (E01)

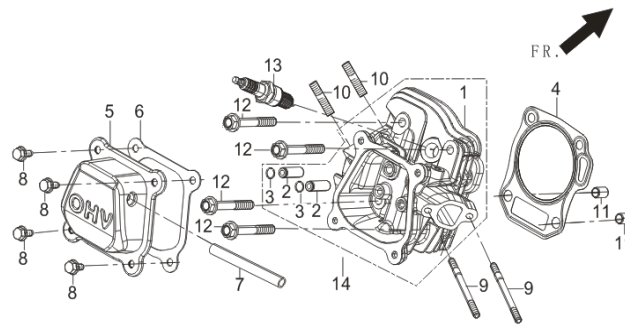

REF.NO.	PART NO	DESCRIPTION	Q'TY
E01-4	12131-Z950110-0000	GASKET, CYLINDER HEAD	1
E01-5	12410-Z300120-0000	COVER SUBASSEMBLY, CYLINDER HEAD	1
E01-6	12004-Z010110-0000	GASKET, CYLINDER HEAD COVER	1
E01-7	17004-Z440110-0000	TUBE, BREATHER	1
E01-8	90001-0612-01	BOLT	4
E01-9	90204-Z010310-0000	STUD	2
E01-10	90203-Z010110-0000	STUD	2
E01-11	90502-1114-00	PIN	2
E01-12	12003-Z010110-0000	BOLT, CYLINDER HEAD	4
E01-13	30010-Z010110-0000	PLUG, SPARK	1
E01-14	12140-Z810210-0000	HEAD SUBASSEMBLY, CYLINDER	1


FIG.2 CRANKCASE. / GEAR ASSY, GOVERNOR. (E02)

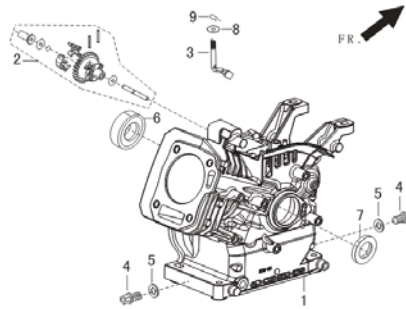

REF.NO.	PART NO	DESCRIPTION	Q'TY
E02-1	11310-Z531120-0099	CRANKCASE ASSY.	1
E02-2	16400-Z010110-0000	GEAR ASSY, GOVERNOR	1
E02-3	16061-Z010110-0000	ARM, GOVERNOR	1
E02-4	11007-Z010110-0000	BOLT, DRAIN PLUG	2
E02-5	90408-Z010110-0000	WASHER	2
E02-6	90547-0205-CL	BEARING	1
E02-7	90682-Z300110-0000	SEAL, OIL	1
E02-8	90408-Z010210-0000	WASHER, GOVERNOR GEAR	1
E02-9	90501-Z010110-0000	PIN	1


FIG.3 COVER SUBASSEMBLY, CRANKCASE (E03)			
REF.NO.	PART NO	DESCRIPTION	Q'TY
E03-1	11411-Z440310-0000	COVER, CRANKCASE	1
E03-2	90547-0205-CL	BEARING	1
E03-3	90682-Z300110-0000	SEAL, OIL	1
E03-4	11001-Z440110-0000	GASKET, CRANKCASE	1
E03-5	90502-0912-00	PIN	2
E03-6	15010-Z010130-Q200	DIPSTICK SUBASSEMBLY, OIL	1
E03-8	15030-Z010130-Q200	PLUG SUBASSEMBLY, ENGINE OIL	1
E03-9	90001-0832-01	BOLT	6

FIG.4 ROD,CRANKSHAFT CONNETING (E04)

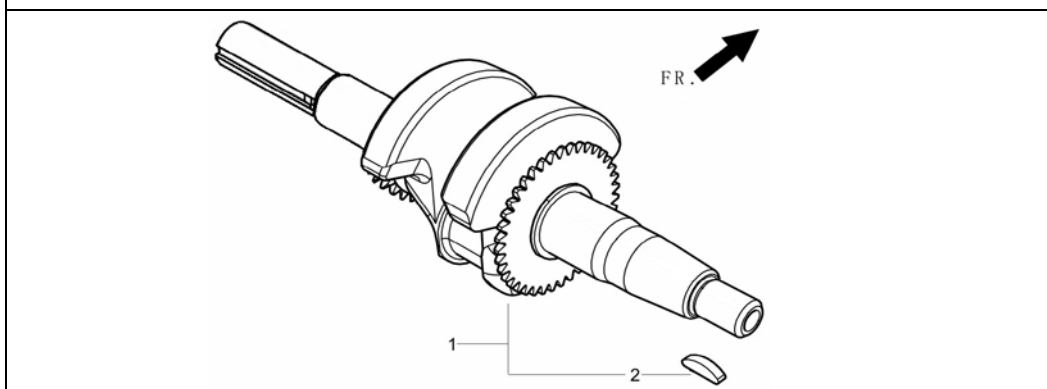


REF.NO.	PART NO	DESCRIPTION	Q'TY
E04-1	13300-Z141410-0000	CRANKSHAFT ASSY.	1

FIG.5 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E05)

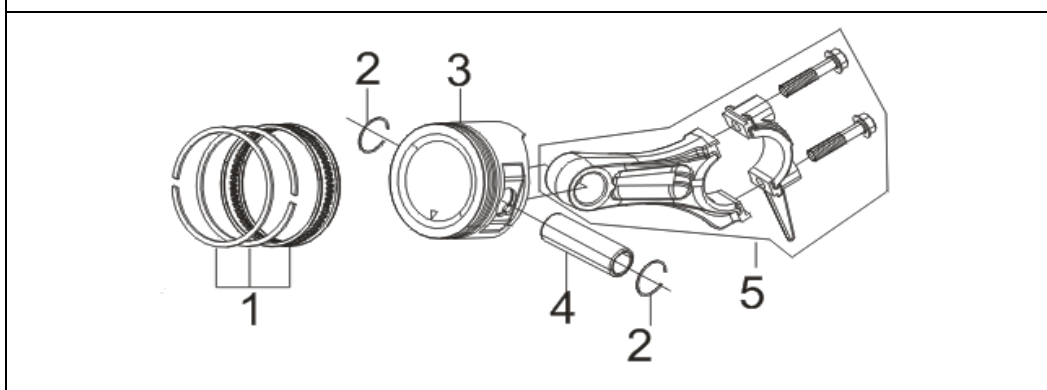


REF.NO.	PART NO	DESCRIPTION	Q'TY
E05-1	13200-Z140210-0099	PISTON RINGS SET	1
E05-2	13122-Z010110-0000	CLIP, PISTON PIN	2
E05-3	13111-Z140220-0099	PISTON	1
E05-4	13121-Z010110-0000	PIN, PISTON	1
E05-5	13010-Z440210-0099	ROD, CONNECTING	1

FIG.6 TRAIN, VALVE / CAMSHAFT SUBASSEMBLY (E06)

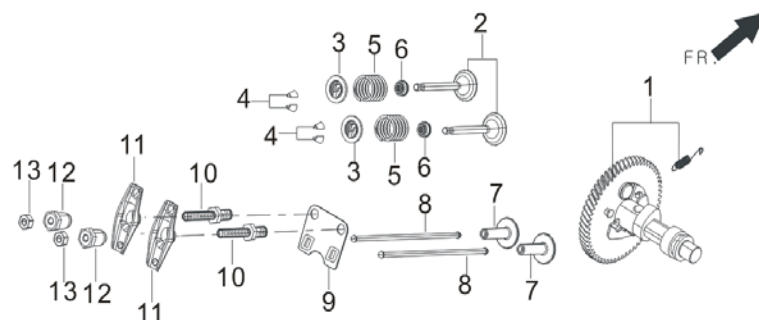


REF.NO.	PART NO	DESCRIPTION	Q'TY
E06-1	14200-Z530210-0099	CAMSHAFT ASSY.	1
E06-2	12110-Z810120-0099	VALVES SET	1
E06-3	12112-Z810210-0000	SEAT, VALVE SPRING	2
E06-4	12109-Z810110-0000	LOCK CLAMP	4
E06-5	12103-Z010110-0000	SPRING, VALVE	2
E06-6	12101-Z810210-0000	GUIDE, SEAL	2
E06-7	14081-Z040110-0000	TAPPET, VALVE	2
E06-8	14071-Z440110-0000	LIFTER, VALVE	2
E06-9	14090-Z010110-0000	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-10	14313-Z010110-0000	BOLT, VALVE ADJUSTING	2
E06-11	14311-Z010110-0000	ROCKER, VALVE	2
E06-12	14314-Z010110-0000	NUT, VALVE ADJUSTING	2
E06-13	14312-Z010110-0000	NUT, VALVE LOCK	2

FIG.7 STARTER,RECOIL (E07)

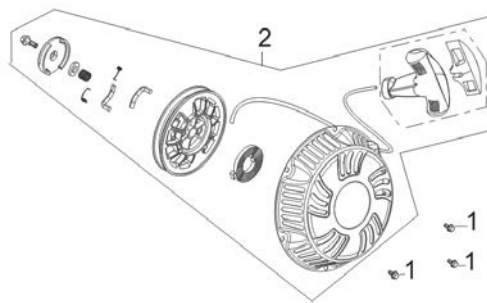


REF.NO.	PART NO	DESCRIPTION	Q'TY
E07-1	90001-0608-01	BOLT	3
E07-2	28200-Z440110-RW00	STARTER ASSY, RECOIL	1

FIG.8 SHROUD / SHIELD,LOWER (E08)

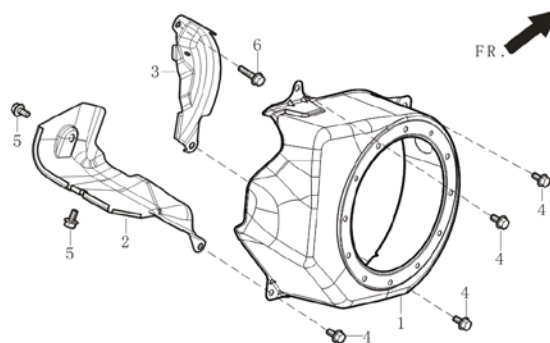


REF.NO.	PART NO	DESCRIPTION	Q'TY
E08-1	28110-Z010410-RW00	SHROUD	1
E08-2	19304-Z010610-0000	SHROUD, CYLINDER BODY	1
E08-3	19340-Z010120-0000	SHIELD, LOWER	1
E08-4	90001-0612-01	BOLT	4
E08-5	90001-0610-01	BOLT	2
E08-6	90001-0616-01	BOLT	1

FIG.9 CARBURETOR ASSY. (E09)

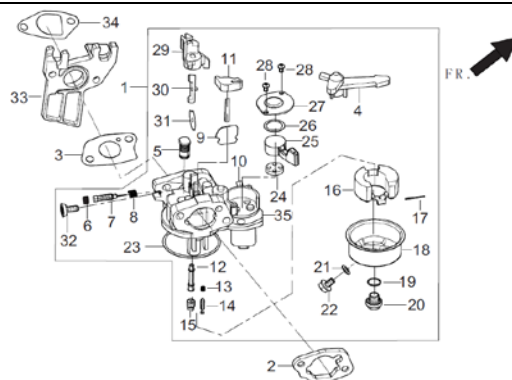


REF.NO.	PART NO	DESCRIPTION	Q'TY
E09-1	16100-Z530610-0099	CARBURETOR ASSY.	1
E09-2	17001-Z010210-0000	GASKET, AIR CLEANER	1
E09-3	16001-Z010110-0000	GASKET, CARBURETOR	1
E09-33	16003-Z010110-0000	PLATE, CARBURETOR INSULATOR	1
E09-34	16002-Z050110-0000	GASKET, CARBURETOR INSULATOR	1

FIG.10 CLEANER, AIR 空濾器 (E10)

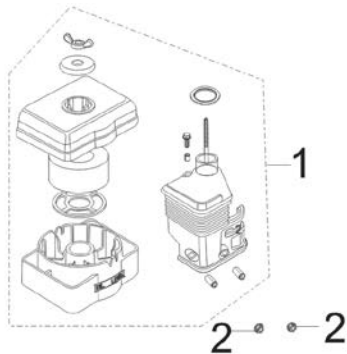


REF.NO.	PART NO	DESCRIPTION	Q'TY
E10-1	17100-Z010410-0000	CLEANER, AIR	1
E10-2	90305-0600-31	NUT	2

FIG.11 MUFFLER ASSY. (E11)

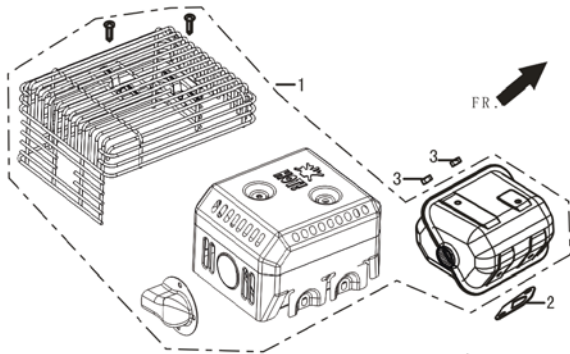

REF.NO.	PART NO	DESCRIPTION	Q'TY
E11-1	18100-Z441810-H300	MUFFLER ASSY	1
E11-2	18001-Z440110-0000	GASKET, EXHAUST OUTLET	1
E11-3	90303-0800-31	NUT	2

FIG.12 TANK ASSY, FUEL (E12)

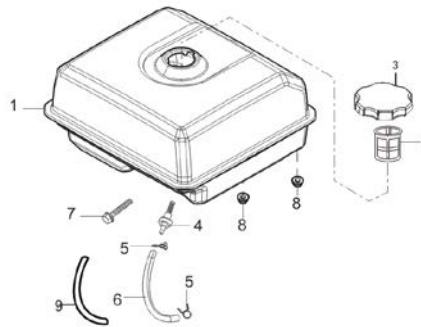

REF.NO.	PART NO	DESCRIPTION	Q'TY
E12-1	16620-Z440120-H300	TANK, FUEL	1
E12-2	16652-Z010810-0000	STRAINER, FUEL	1
E12-3	16730-Z010820-QB00	COVER, FUEL TANK	1
E12-4	16680-Z010110-0000	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
E12-5	90740-Z010210-0000	CLAMP	2
E12-6	90686-Z010710-0000	TUBE, FUEL	1
E12-7	90001-0630-01	BOLT	1
E12-8	90305-0600-31	NUT	2
E12-9	30431-Z010110-0000	JACKET, RUBBER	1




FIG.13 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E13)			
			
REF.NO.	PART NO	DESCRIPTION	Q'TY
E13-1	13501-Z010110-0000	NUT, FLYWHEEL	1
E13-2	28002-Z010310-0000	PULLEY, STARTER	1
E13-3	19352-Z010110-0000	IMPELLER	1
E13-4	13510-Z010110-0000	FLYWHEEL SUBASSEMBLY	1
E13-7	90001-0625-01	BOLT	2
E13-9	30400-Z440110-0100	COIL, IGNITION	1

FIG.14 CONTROL ASSY, THROTTLE (E14)




REF.NO.	PART NO	DESCRIPTION	Q'TY
E14-1	16520-Z011710-0000	CONTROL ASSY, THROTTLE	1
E14-11	90001-0610-01	BOLT	2
E14-12	16063-Z010710-0000	SPRING, GOVERNOR	1
E14-13	16062-Z010110-0000	ROD, GOVERNEOR	1
E14-14	16012-Z010110-0000	SPRING, THROTTLE VALVE RETURNING	1
E14-15	16072-Z010110-0000	BOLT, GOVERNOR SUPPORT	1
E14-16	90305-0600-31	NUT	1
E14-17	16070-Z010110-0000	SUPPORT SUBASSEMBLY, GOVERNOR	1

FIG.15 TILLER

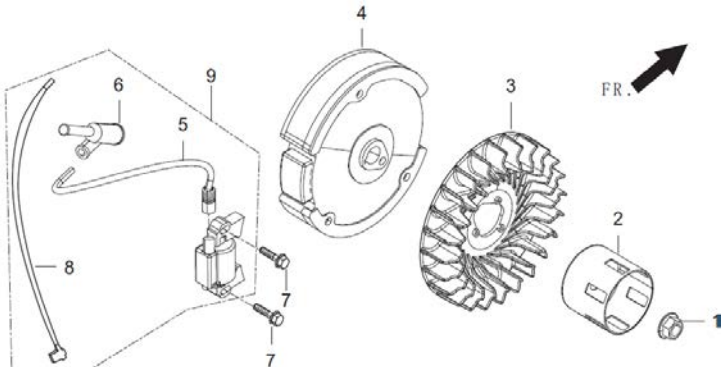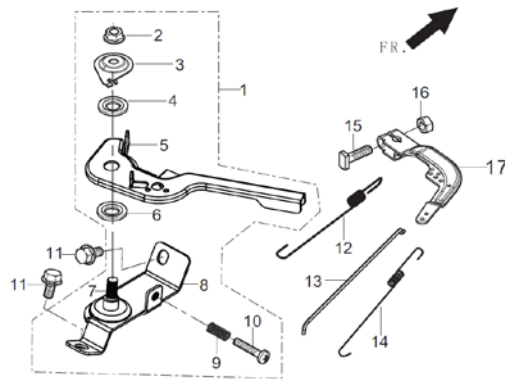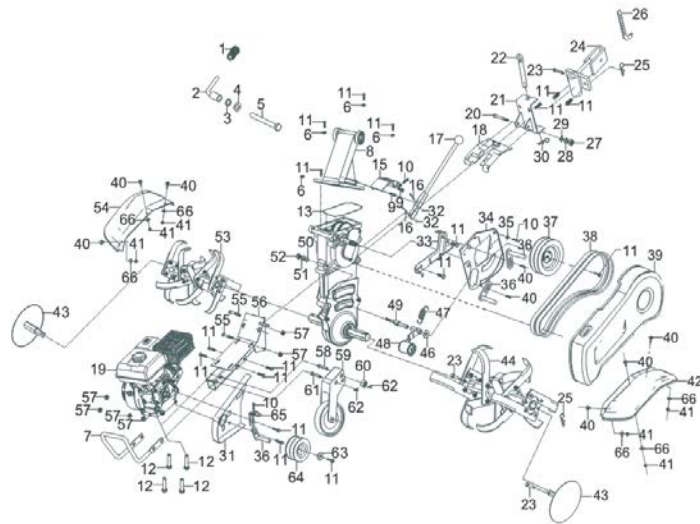


REF.NO.	PART NO	DESCRIPTION	Q'TY
E15-1	54101-U080110	SLEEVE, HANDLE RUBBER	1
E15-2	54203-U080110	LOCKING HANDLE	1
E15-3	90403-1600-01	WASHER, FLAT	1
E15-4	90408-1600-E1	WASHER, FLAT	1
E15-5	90004-U070110-01	HEX BOLT	1
E15-6	90403-0800-Z1	WASHER, FLAT	4
E15-7	58410-U070110-H300	GUARD	1
E15-8	54200-U070210-GS00	HANDLE BASE ASSY.	1
E15-9	90001-0610-01	BOLT	2
E15-10	90001-0616-01	BOLT	3
E15-11	90001-0820-01	BOLT	16
E15-12	90001-0840-01	BOLT	4
E15-13	11062-U070110	GASKET, TRANSMISSION BOX COVER	1
E15-15	54204-U070110-0000	BRACKET	1
E15-16	90504-U070210-0000	PIN ROLL	2
E15-17	54205-U070110-0000	GEAR LEVER	1
E15-18	76007-U070610-RU00	TINE SHIELD	1
E15-19	R210MR000WC-PTS002	ENGINE 212CC	1
E15-20	90004-1095-01	HEX BOLT	1
E15-21	76025-U070110-0000	TRAILER RING	1
E15-22	90504-U070410-0000	PIN ROLL	1
E15-23	90504-U070110-0000	PIN ROLL	3
E15-24	76024-U070210-H300	CONNECTOR	1
E15-25	90583-0238-01	R -PIN	2
E15-26	76016-U080110-H300	FRONT AND REAR BRACKET	1
E15-27	90303-1000-31	NUT	1
E15-28	90403-1000-01	WASHER, FLAT	1
E15-29	90408-1000-E1	WASHER, FLAT	1
E15-30	90583-3581-01	R -PIN	1
E15-31	51143-U070310-0000	PLATE, BOTTOM	1
E15-32	90583-0125-01	R -PIN	2
E15-33	76217-U070110-0000	BRACKET FOR TENSION CABLE	1
E15-34	51143-U070210-0000	PLATE, BOTTOM	1
E15-35	90406-0600-E1	WASHER, FLAT	1
E15-36	76215-U070210-0000	TENSIONING BLOCK	3
E15-37	76305-U070310-0000	BELT PULLEY	1
E15-38	76304-U070210-0000	TRANSMISSION PULLEY	2
E15-39	76306-U070310-H300	BELT COVER	1
E15-40	90001-0616-01	BOLT	8
E15-41	90325-0600-31	NON-METALLIC HEX LOCK BOLT	6
E15-42	76007-U060210-RU00	TINE SHIELD	1
E15-43	76723-U070110	TRIMMING WHEEL	2
E15-44	76700-U070110	DEVICE SUBASSEMBLY, REVOLVE TILLING	1
E15-46	90401-0600-01	WASHER, FLAT	1
E15-47	72106-U070110-0000	SPRING, TENSION	1
E15-48	76307-U070110-0000	BELT TENSION PULLEY	1
E15-49	76216-U070110-0000	IDLER SHAFT	1
E15-50	90408-0800-E1	WASHER, FLAT	1
E15-51	90403-0800-Z1	WASHER, FLAT	1
E15-52	90303-0800-31	NUT	1
E15-53	76700-U070210	DEVICE SUBASSEMBLY, REVOLVE TILLING	1
E15-54	76007-U060310-RU00	TINE SHIELD	1
E15-55	90001-0865-01	BOLT	2
E15-56	51211-U070110-H300	DEAD PLATE	1
E15-57	90305-Z010110-0000	NUT	6
E15-58	90015-1080-01	BOLT	1
E15-59	44100-U070210-0000	WHEEL ASSY, FRONT	1
E15-60	90307-1000-01	HEXAGON SLOTTED NUT	1
E15-61	90504-1070-01	PIN ROLL	1
E15-62	90501-2525-01	PIN	2
E15-63	90412-U070410-0000	WASHER, FLAT	1
E15-64	76305-U070410-0000	BELT PULLEY	1
E15-65	76215-U070110-0000	TENSIONING BLOCK	1
E15-66	90406-0600-E1	WASHER, FLAT	6

FIG.16 WALKING ENCLOSURE

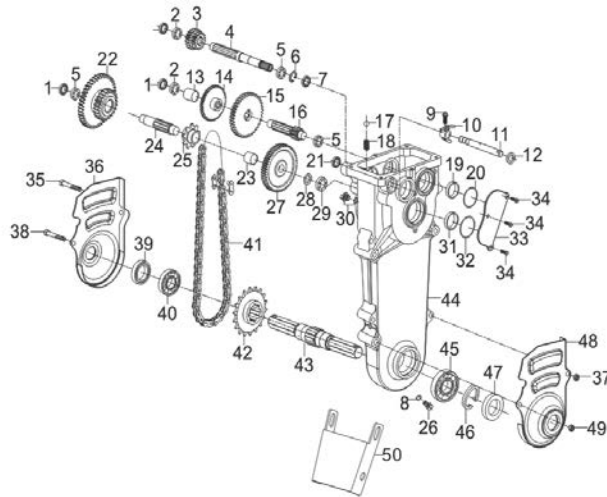


REF.NO.	PART NO	DESCRIPTION	Q'TY
E16-1	28101-U070110-0000	PLUG, RUBBER	3
E16-2	90548-0002-CL	BEARIN, DEEP GROOVE BALL	2
E16-3	28301-U070110-0000	GEAR, DUPLICATE	1
E16-4	23501-U070110-0000	MAINSHAFT	1
E16-5	90548-0202-CL	BEARIN, DEEP GROOVE BALL	3
E16-6	90571-3500-06	CIRCLIP FOR HOLE	1
E16-7	90682-U070110-0000	SEAL, OIL	1
E16-8	90408-Z010110-0000	WASHER, FLAT	1
E16-9	90001-0616-01	BOLT	1
E16-10	24421-U070110-0000	FORK, SHIFTS	1
E16-11	24422-U070210-0000	AXIS, SHIFTS FORK	1
E16-12	90682-U070410-0000	SEAL, OIL	1
E16-13	90683-U070610-0000	BUSH	1
E16-14	23611-U070120-0000	GEAR 1ST, COUNTERSHAFT	1
E16-15	23621-U070210-0000	GEAR 2ND, COUNTERSHAFT	1
E16-16	23601-U070110-0000	COUNTERSHAFT	1
E16-17	90543-6300-00	BALL, STEEL	1
E16-18	24524-U070110-0000	SPRING, STOPPER	1
E16-19	90683-U070210-0000	BUSH	1
E16-20	90692-U070110-0000	O-RING RUBBER SEAL	1
E16-21	28101-U070210-0000	PLUG, RUBBER	1
E16-22	28301-U070310-0000	GEAR, DUPLICATE	1
E16-23	90683-U070310-0000	BUSH	1
E16-24	40201-U070110-0000	DRIVE SHAFT	1
E16-25	42011-U070110-0000	SPROCKET, WHEEL	1
E16-26	11007-Z450110-0000	BOLT, DRAIN PLUG	1
E16-27	23711-U070110-0000	GEAR, INTERMEDIATE	1
E16-28	90412-U070110-0000	WASHER, FLAT	1
	90412-U070210-0000	WASHER, FLAT	
	90412-U070310-0000	WASHER, FLAT	
E16-29	90548-0203-CL	BEARIN, DEEP GROOVE BALL	1
E16-30	15030-U070110-G400	PLUG SUBASSEMBLY, ENGINE OIL	1
E16-31	90683-U070410-0000	BUSH	1
E16-32	90692-U070210-0000	O-RING RUBBER SEAL	1
E16-33	12441-U070110-0000	SEAL, GUIDE	1
E16-34	90001-0612-01	BOLT	3
E16-35	90001-0650-01	BOLT	1
E16-36	50115-U070210-WB00	PROTECTING PLATE	1
E16-37	90305-0600-31	NUT	1
E16-38	90001-0860-01	BOLT	1
E16-39	90682-U070210-0000	SEAL, OIL	1
E16-40	90548-0005-CL	BEARIN, DEEP GROOVE BALL	1
E16-41	90710-U070110-0000	CHAIN	1
E16-42	42011-U070210-0000	SPROCKET, WHEEL	1
E16-43	76315-U070110-0000	OUTPUT SHAFT	1
E16-44	76351-U070110-H300	BOX BODY, TRANSMISSION	1
E16-45	90548-0205-CL	BEARIN, DEEP GROOVE BALL	1
E16-46	90571-5200-06	CIRCLIP FOR HOLE	1
E16-47	90682-U070310-0000	SEAL, OIL	1
E16-48	50115-U070110-WB00	PROTECTING PLATE	1
E16-49	90305-0800-31	NUT	1
E16-50	50115-U070310-WB00	PROTECTING PLATE	1

FIG.17 HANDLES

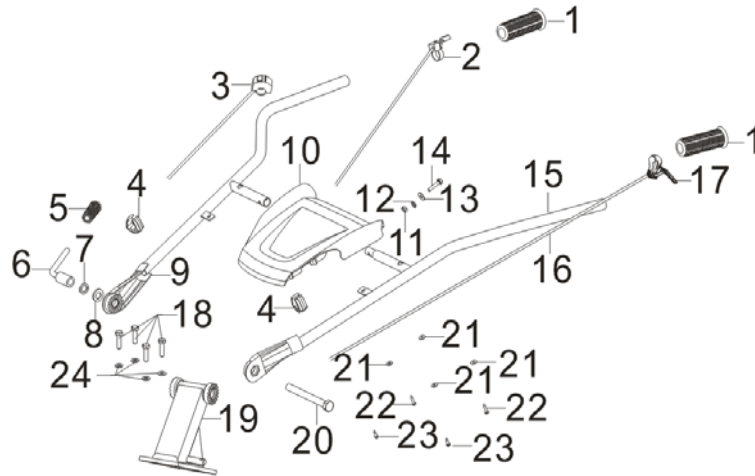


REF.NO.	PART NO	DESCRIPTION	Q'TY
E17-1	54101-U070110-0000	SLEEVE, HANDLE RUBBER	2
E17-2	16550-U070310-0000	THROTTLE SWITCH ASSEMBLY	1
E17-3	35540-U220110-0000	SWITCH SUBASSEMBLY, STOP ENGINE	1
E17-4	90684-U110110-0000	CLIP	2
E17-5	54101-U060110-0000	SLEEVE, HANDLE RUBBER	2
E17-6	54203-U080110-0000	LOCKING HANDLE	1
E17-7	90403-1600-01	WASHER, FLAT	1
E17-8	90408-1600-E1	WASHER, FLAT	1
E17-9	54110-U070520-H300	HANDLE TUBE ASSY	1
E17-10	54125-U060110-Q200	PANEL	1
E17-11	90303-0800-31	NUT	1
E17-12	90403-0800-Z1	WASHER, FLAT	1
E17-13	90406-0800-E1	WASHER, FLAT	1
E17-14	90005-0835-01	HEX BOLT	1
E17-15	54110-U070420-H300	HANDLE TUBE ASSY	1
E17-16	54020-U070110-0000	CABLE, CLUTCH	1
E17-17	54035-U060110-0000	HANDLE, IDLE CONTROL	1
E17-18	90001-0820-01	BOLT	4
E17-19	54200-U070210-H300	HANDLE BASE ASSY.	1
E17-20	90004-U070110-0000	HEX BOLT	1
E17-21	90406-0500-31	WASHER, FLAT	4
E17-22	90107-4819-01	SCREW	2
E17-23	90107-4813-01	SCREW	2
E17-24	90403-0800-Z1	WASHER, FLAT	4

FIG.18 WHEELS

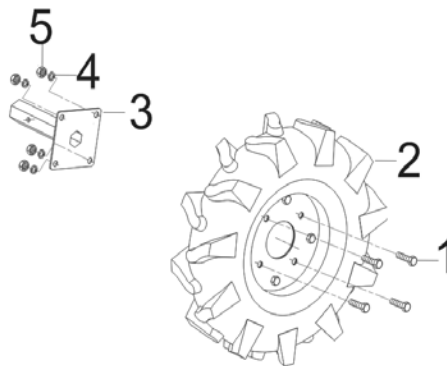


REF.NO.	PART NO	DESCRIPTION	Q'TY
E18-1	90005-1025-01	HEX BOLT	8
E18-2	76008-U070110-H300	WHEEL, TRANSPORTION	2
E18-3	42002-U070110-H300	SHAFT, REAR WHEEL	2
E18-4	90403-1000-01	WASHER, FLAT	8
E18-5	90303-1000-31	NUT	8

FIG.19 RIGHT BLADE

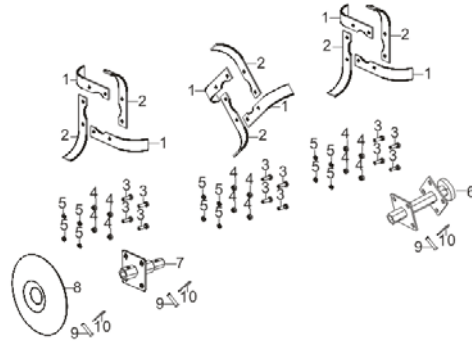

REF.NO.	PART NO	DESCRIPTION	Q'TY
E22-1	76721-U070110	BLADE	6
E22-2	76721-U070210	BLADE	6
E22-3	90005-0825-01	BOLT	12
E22-4	90403-0800-Z1	WASHER, FLAT	12
E22-5	90303-0800-31	NUT	12
E22-6	76725-U390310	BLADE CYLINDER	1
E22-7	76725-U390410	BLADE CYLINDER	1
E22-8	76723-U220110	TRIMMING WHEEL	2
E22-9	90504-U070110-0000	PIN	3
E22-10	90583-0238-01	R TYPE PIN	3

FIG.20 LEFT BLADE

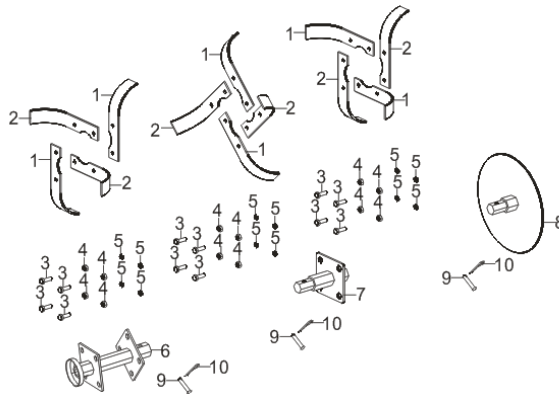

REF.NO.	PART NO	DESCRIPTION	Q'TY
E23-1	76721-U070110	BLADE	6
E23-2	76721-U070210	BLADE	6
E23-3	90005-0825-01	BOLT	12
E23-4	90403-0800-Z1	WASHER, FLAT	12
E23-5	90303-0800-31	NUT	12
E23-6	76725-U390310	BLADE CYLINDER	1
E23-7	76725-U390410	BLADE CYLINDER	1
E23-8	76723-U220110	TRIMMING WHEEL	2
E23-9	90504-U070110-0000	PIN	3
E23-10	90583-0238-01	R TYPE PIN	3